



48	TBH 1066A-0604	后退踏板套	1						
47	TBH 1066A-0605	前进踏板组合	1						
46	TBH 1066A-0603	前进踏板套	1						
45	TBH 1066A-0619	手刹拉杆扣	1						
44	TBH 1066A-0616	手刹拉杆	1						
43	TBH 1066A-0694	制动踏板套	1						
42	TBH 1066A-060700	脚踏离合踏板组合	1						
41	TBH 1066A-0621	行走皮带张紧轮A支架挂钩	1						
40	GB5789-1986	螺栓 M8×20	2						
39	TBH 1066A-0613	脚踏拉杆	1						
38	TBH 1066A-0691	制动杆压簧	1						
37	GBT896-1986	开口挡圈15	2						
36	TBH 1066A-0655	后桥离合拉杆	1						
35	TBH 1066A-0650	后轮轴套	2						
34	GB/T 97.1-2002	垫圈 18	4						
33	TBH 1066A-0649	后轴平键4.7×4.7×50	2						
32	GB5789-1986	螺栓 M8×65	4						
31	GBT6187.2-2000	螺母 M8	8						
30	K46DD	静液式驱动桥	1						
29	TBH 1066A-0615	刹车销	1						
28	TBH 1066A-0653	驱动皮带轮导向架	1						
27	TBH 1066A-0205	后桥连接板	1						
26	TBH 1066A-0204	后桥固定板	1						
25	TBH 1066A-0640	行走皮带	1						盖带K92（左桥）
24	TBH 1066A-0632	行走皮带张紧轮B支架	1						
23	TBH 1066A-0633	行走皮带张紧轮皮带挡杆	1						
22	TBH 1066A-062200	行走皮带张紧轮B	1						
21	TBH 1066A-063100	行走皮带张紧轮A	1						
20	GBT6187.1-2000	螺母M10×1.5	4						
19	TBH 1066A-062700	行走皮带导向轮	1						
18	TBH 1066A-0626	行走皮带张紧弹簧	1						
17	TBH 1066A-0623	行走皮带挡板	1						
16	TBH 1066A-0672	方颈螺栓M10×1.5×45	2						
15	TBH 1066A-0629	垫圈10.5×51×3.4	1						
14	TBH 1066A-0624	行走皮带张紧轮A支架	1						
13	TBH 1066A-0628	导向轮衬套	2						
12	TBH 1066A-0675	方颈螺栓M10×1.5×64	1						
11	TBH 1066A-0637	行走主动链锁紧螺栓	1						英制
10	TBH 1066A-0721	行程开关	1						
9	TBH 1066A-0638	离合器垫圈12×38×6.5	1						
8	TBH 1066A-0428	离合器总成	1						
7	TBH 1066A-063600	行走主动轮	1						
6	TBH 1066A-0642	主动轮护架B	1						
5	GB5789-1986	螺栓M10×25	4						
4	TBH 1066A-0641	主动轮护架A	2						
3	GB5789-1986	螺栓M8×16	13						
2	TBH 1066A-0202	动机底板	1						
1	TBH 1066A-020100	车架组合	1						组合件
序号	代号	名称	数量	材料	单件重量	总计重量	备注		
标记	标记	分 区	更改文件号	签 字	日期	三力机车有限公司			
设计			标准			图样标记	数量	重量	比例
校 对			审 定						
审 核			批 准						
工 艺						共	页	第	页
TBH 1066A-06									